



IDENTIFICATION OF THE PARTS: FOR NIKON Z 50II HOUSING

1. Locking knob
2. Fiber optic connection
3. Hole M8
4. Hole M16x1
5. ZOOM gear
6. Port safety lever
7. Lens release button
8. Open in-built flash lever

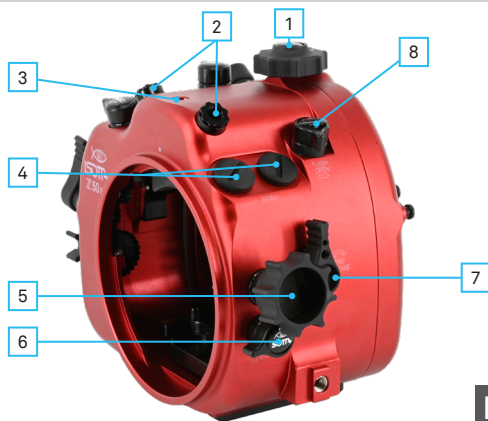

EN

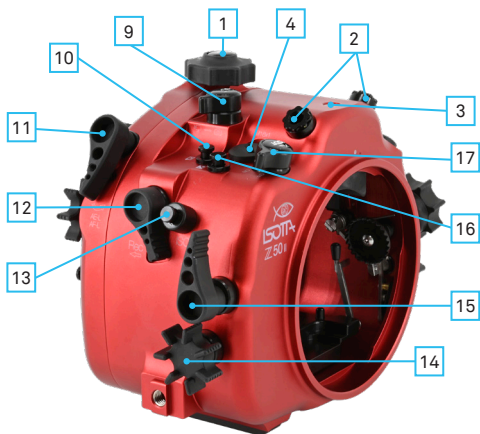

9. Photo/video selector
10. Picture Control button
11. AE-L / AF-L lever
12. Video-record button (REC)
13. ISO button
14. Sub-command dial
15. Shutter-release lever
16. [A] button
17. Power switch lever (ON/OFF)

19. Vacuum sensor led (if in use)
20. Release mode/Self-timer button
21. Delete button
22. Viewfinder
23. Humidity sensor led
24. Mode dial
25. DISP button
26. Main command dial
27. Multi selector buttons
28. MENU button
29. Playback button
30. Playback zoom out/thumbnails button
31. Playback zoom in button
32. *i* button
33. Monitor mode button

